## 2-Color Display

# **Digital Flow Switch**


Applicable fluid Dry air, N2, Ar, CO2





### A wide range of flow measurement is possible with 1 product.

Flow ratio\*2 100: 1 \*2 Excludes the PF2M725 \*3 Made to order (Produced upon receipt of order)

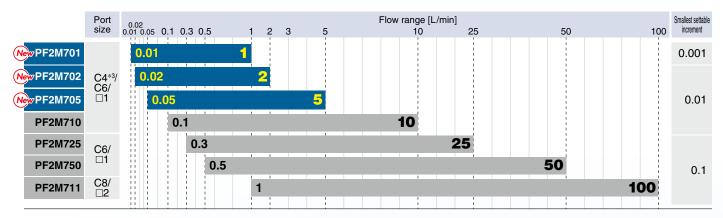

### New **O IO**-Link Compatible

The flow rate value and the device status can be figured out easily via the process data.

PF2M7-L Series p. 4

Diagnosis items

Over current error, Outside of rated flow range, Accumulated flow error, Internal product malfunction

Made to order

Compatible with argon (Ar) and carbon dioxide (CO<sub>2</sub>) mixed gas

p. **23** 

# Improved resistance to moisture and foreign matter 1.1

The bypass construction reduces sensor accuracy deterioration and damage.

\* There is no bypass construction for the 1 and 2 L ranges.

### Compact, Lightweight 19.1

4.7 mm / 4.5 mm shorter


**27.3**% lighter

Port size: ø6

New Female thread piping has been added.
Female thread: 1/8, 1/4 (Rc, NPT, G)




Provide the second seco






# Improved resistance to moisture and foreign matter

The bypass construction reduces the moist air or foreign matter in contact with the sensor, reducing sensor accuracy deterioration and damage.

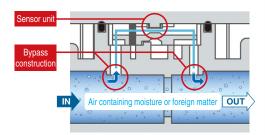

\* There is no bypass construction for the 1 and 2 L ranges.

#### **Compact, Lightweight**

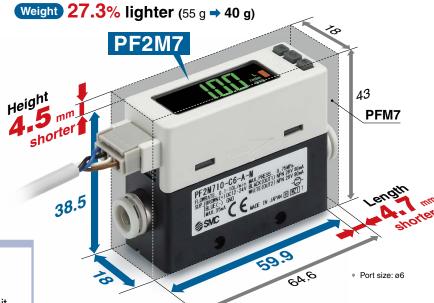

### Reversible display mode

When the product is mounted upside down, the orientation of the display can be rotated to make it easier to read.



### **Piping variations**

One-touch fitting

\* ø4: Made to order (Produced upon receipt of order)





#### Female thread





# A flow adjustment valve is integrated into the product.

Space-saving design



Flow adjustment valve

### **Display OFF mode**



LEDs can be turned off and checked when necessary. The product can also be used as a remote sensor.

# Mounting variations







# The digital display allows for the visualization of the flow rate.


2-color display, Improved visibility



Select a model according to the fluid




### Recommended pneumatic circuit examples

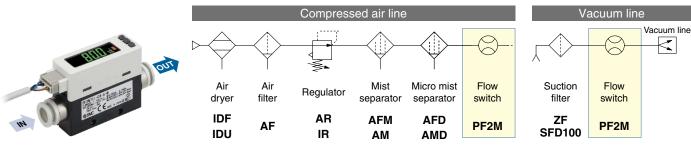


<sup>\*</sup> Recommended air quality class: JIS B 8392-1 1.1.2 to 1.6.2 (ISO 8753-1 1.1.2 to 1.6.2)

#### **Analog free span function**

The analog span point (5 V (10 V), 20 mA) can be changed within 10 to 105% of the rated flow rate with respect to the displayed value.





### Selectable analog output function

1 to 5 V or 0 to 10 V can be selected.

#### **Delay time setting**

#### Can be set between 0 and 60 s

The delay time can be set according to the application.

#### **Grease-free**

24, 25
Key lock
Reset to the default settings
Delay time setting
Error display
Setting of security code
Display mode
Display with zero cut-off setting
Accumulated value hold
Simple setting
Zero clear


# Low current consumption: 35 mA\*1 or less

\*1 PFM7: 55 mA or less


# Power supply voltage: 12 to 24 V


\* For the IO-Link device: 18 to 30 V




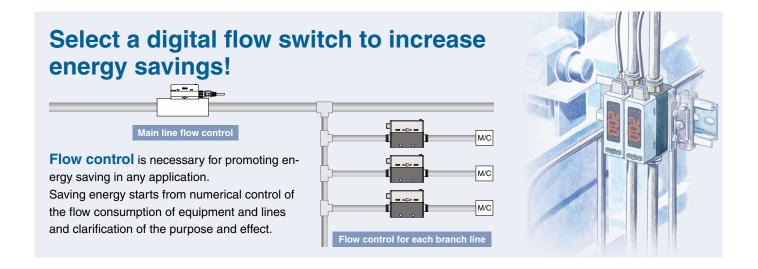


### **Applications**

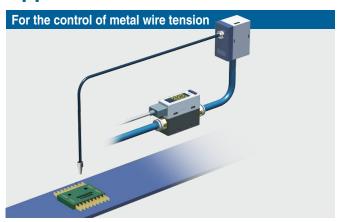

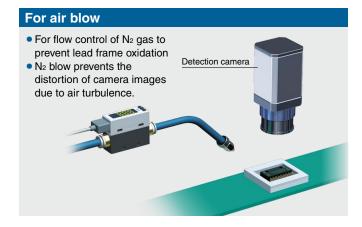

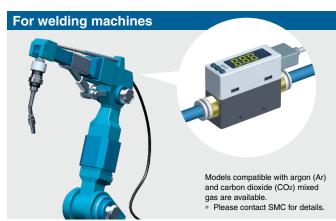

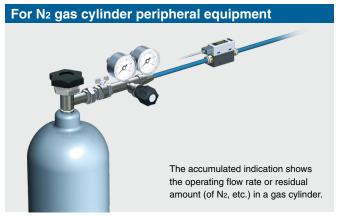






### IO-Link Compatible PF2M7□□-

p. **10** 

### Supports the IO-Link communication protocol

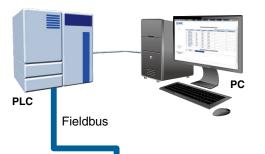

0

0

0

#### Configuration File (IODD File\*1)

- · Manufacturer · Product part no.
- · Set value

IODD is an abbreviation of IO Device Description. This file is necessary for setting the device and connecting it to a master. Save the IODD file on the PC to be used to set the device prior to use.



interface technology between the sensor/actuator and the I/O terminal that is an

international standard: IEC61131-9.

IO-Link Compatible Device: Digital Flow Switch

#### **Device settings** can be set by the master.

- Threshold value
- Operation mode, etc.

### Read the device data.

- · Switch ON/OFF signal and analog value
- Device information:

Manufacturer, Product part number, Serial number, etc.

- Normal or abnormal device status
- Cable breakage



#### Implement diagnostic bits in the process data.

IO-Link Master

The diagnostic bit in the cyclic process data makes it easy to find problems with the equipment.

It is possible to find problems with the equipment in real time using the cyclic (periodic) data and to monitor such problems in detail with the noncyclic (aperiodic) data.

#### **Process Data**

Bit offset	Item	Note	
0	OUT1 output	0: OFF 1: ON	
1	OUT2 output	0: OFF 1: ON	
8	Diagnosis (flow rate)	0: OFF 1: ON	
14	Fixed output	0: OFF 1: ON	
15	Diagnosis (error)	0: OFF 1: ON	
16 to 31	Measured flow rate value Signed 16 b		

Diagi	iosis ilems
	rrent error of rated flow
range · Accumu	lated flow
error	
· Internal	•

Bit offset	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Item		Measured flow rate value (PD)														
Bit offset	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Item	Error	Fixed		Re	servat	ion		Flow rate			Reser	vation			OUT2	OUT1
	Diagnosis	Output						Diagnosis							Switch	output

### Application Example For the predictive maintenance of suction verification The flow rate "switch ON/OFF signals" and "analog values" are monitored to determine the suction status. The process and suction status can then be compared.


#### **Operation and Display**

Communication with master	IO-Link status indicator light	Status		Screen display*2	Description			
	*1			Operate	ope.	Normal communication status (readout of measured value)		
Yes			Normal	Start up	Strt.	At the start of communication		
res						Preoperate	PrE.	At the start of communication
	**1	IO-Link mode		Version does not match	Er 15.	The IO-Link version does not match that of the master. The master uses version 1.0.		
No	(Flashing)		Abnormal	Communication disconnection	ope Strt Pre	Normal communication was not received for 1 s or longer.		
	OFF	SIO mode		5 10	General switch output			

- \*1 In IO-Link mode, the IO-Link indicator is ON or flashing.
  \*2 "LoC" is displayed when the data storage lock is enabled. (Except for when the version does not match or when in SIO mode) The display color can be set to red or green.



#### Flow Switch Flow Rate Variations

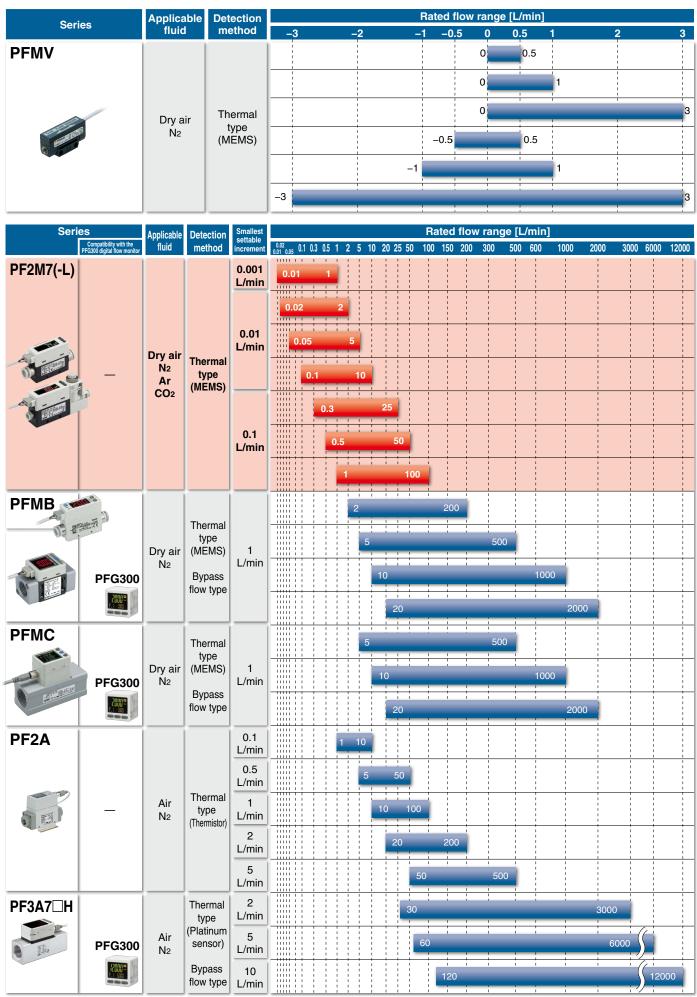

### Flow Switch Variations / Basic Performance Table


LIO	V SWILCH V	ariations / i	Basic Perio	nillalice la	bie	
	PFMV	PF2M7(-L)	PFMB	PFMC	PF2A	PF3A7□H
Series	PFMV3		PFG300	PFG300		PFG300
Enclosure	IP40	IP40	IP40	IP65 [Monitor unit IP40]	IP65	IP65 [Monitor unit IP40]
Fluid	Dry air, N₂	Dry air, N <sub>2</sub> , Ar, CO <sub>2</sub>	Dry air, N₂	Dry air, N₂	Air, N₂	Air, N <sub>2</sub>
Setting	Digital	Digital	Digital	Digital	Digital	Digital
Rated flow range	0 to 0.5 L/min -0.5 to 0.5 L/min 0 to 1 L/min -1 to 1 L/min 0 to 3 L/min -3 to 3 L/min	0.01 to 1 L/min 0.02 to 2 L/min 0.05 to 5 L/min 0.1 to 10 L/min 0.3 to 25 L/min 0.5 to 50 L/min 1 to 100 L/min	2 to 200 L/min 10 to 1000 L/min 20 to 2000 L/min	5 to 500 L/min 10 to 1000 L/min 20 to 2000 L/min	1 to 10 L/min 5 to 50 L/min 10 to 100 L/min 20 to 200 L/min 50 to 500 L/min	30 to 3000 L/min 60 to 6000 L/min 120 to 12000 L/min
Power supply voltage	12 to 24 VDC ±10%	PF2M7 12 to 24 VDC ±10%  PF2M7-L 18 to 30 VDC ±10%	12 to 24 VDC ±10%	12 to 24 VDC ±10%	12 to 24 VDC ±10%	24 VDC ±10%
Temperature characteristics (25°C standard)	±2% F.S. (15 to 35°C) ±5% F.S. (0 to 50°C)	±3% F.S. ±1 digit (15 to 35°C) ±5% F.S. ±1 digit (0 to 50°C)	±2% F.S. (15 to 35°C) ±5% F.S. (0 to 50°C)	±2% F.S. (15 to 35°C)	±3% F.S. (15 to 35°C) ±5% F.S. (0 to 50°C)	
Repeatability	±1% F.S. [Monitor unit] (Fluid: Dry air) Analog output: ±5% F.S. Analog output: ±0.5% F.S.	±1% F.S. ±1 digit (Fluid: Dry air)	±1% F.S. Monitor unit (Fluid: Dry air) ±0.1% F.S.	±1% F.S. Monitor unit (Fluid: Dry air) ±0.1% F.S.	±1% F.S. (PF2A7□0) ±2% F.S. (PF2A7□1)	$\pm 1\%$ F.S. $\begin{bmatrix} \text{Monitor unit} \\ \pm 0.1\% \text{ F.S.} \end{bmatrix}$
Hysteresis	Hysteresis mode: Variable Window comparator mode: Variable	Hysteresis mode: Variable Window comparator mode: Variable	Hysteresis mode: Variable Window comparator mode: Variable	Hysteresis mode: Variable Window comparator mode: Variable	Hysteresis mode: Variable Window comparator mode: Fixed (3 digits)	Hysteresis mode: Variable Window comparator mode: Variable
Output	NPN/PNP open collector Analog voltage output Analog current output	NPN/PNP open collector Accumulated pulse output Analog voltage output Analog current output	NPN/PNP open collector Accumulated pulse output Analog voltage output Analog current output	NPN/PNP open collector Accumulated pulse output Analog voltage output Analog current output	NPN/PNP open collector Accumulated pulse output	NPN/PNP open collector Accumulated pulse output Analog voltage output Analog current output
Display	[Monitor unit 2-color LCD display]	2-color LCD display	2-color 2-color LED display LCD display	3-color LCD display	LED display	3-color LCD display

<sup>\*</sup> The monitor unit values are for the PFG300 and PFMV3.



# CONTENTS

# 2-Color Display Digital Flow Switch PF2M7(-L) Series

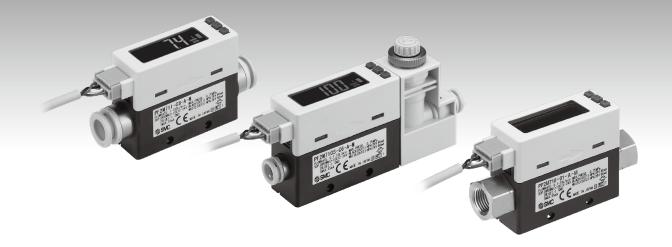


How to Orderp. 9
Specifications pp. 11, 12
Set Point Range and Rated Flow Range p. 13
Flow/Analog Output p. 13
Pressure Loss (Reference Data): Without Flow Adjustment Valve p. 14
Flow Rate Characteristics (Reference Data) p. 14
Flow Rate Characteristics at Negative Pressure (Reference Data) p. 15
Internal Circuits and Wiring Examples pp. 16, 1
Construction: Parts in Contact with Fluid p. 18
Dimensions p. 19
Made to Order p. 23
Function Details pp. 24, 29
Safety Instructions Back cove



2-Color Display Digital Flow Switch RoHS

# PF2M7 Series







01	0.01 to 1 L/min
02	0.02 to 2 L/min
05	0.05 to 5 L/min
10	0.1 to 10 L/min
25	0.3 to 25 L/min
50	0.5 to 50 L/min
11	1 to 100 L/min

#### 2 Flow adjustment valve

Thow adjustine it valve					
Nil	None				
S	Yes				

\* The flow adjustment valve is not available for the 1, 2, and 5 L type products.

#### Port size

Cumbal	Dort size		F	Rated	flow	rang	е	
Symbol	Port size	01	02	05	10	25	50	11
01	Rc1/8	•	•	•	•	•	•	_
N1	NPT1/8	•	•	•	•	•	•	_
F1	G1/8	•	•	•	•	•	•	_
02	Rc1/4	_	_	_	—	_	_	•
N2	NPT1/4	_	_	_	_	_	_	•
F2	G1/4	_	_	_	—	_	_	•
C4*1	ø4	•	•	•	•	_	_	_
C6	ø6	•	•	•	•	•	•	
C8	ø8	_	_	_	_	_	_	•
Made	:1 Made to ander (Dreduced upon receipt of ander)							

\*1 Made to order (Produced upon receipt of order)

#### **Piping variations**

With One-touch fitting	Female thread
C4*2, C6, C8	01, 02, N1, N2, F1, F2
0 0 0	2 2


\*2 Made to order (Produced upon receipt of order)

#### 4 Output specification


Symbol	OUT1	OUT2				
Α	NPN	NPN				
В	PNP	PNP				
С	NPN Analog 1 to 5 V $\Leftrightarrow$ Analog 0 to 10 V*3					
D	NPN Analog 4 to 20 mA					
E	<b>E</b> PNP Analog 1 to 5 V ⇔ Analog 0 to 10 V*3					
F	PNP Analog 4 to 20 mA					

\*3 1 to 5 V or 0 to 10 V can be selected by pressing the button. The default setting is 1 to 5 V.

#### Option 2

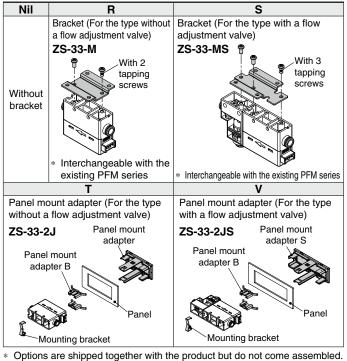

**5** Option 1

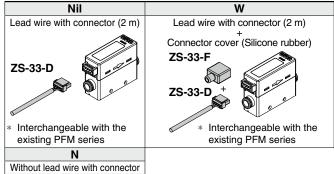

#### 6 Unit specification

O o int opoomoution				
M	SI unit only*4			
Nil	Unit selection function*5			

- \*4 Fixed unit: Instantaneous flow: L/min Accumulated flow: L
- \*5 This product is for overseas use only. (The SI unit type is provided for use in Japan in accordance with the New Measurement Act.) The unit can be changed. Instantaneous flow: L/min ⇔ cfm


### 8 Calibration certificate\*6

Nil None
A Yes

\*6 Made to order

The certificate is in both English and Japanese.

#### DIN Rail Mounting Bracket (To Be Ordered Separately)

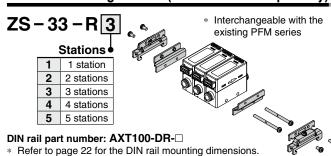


## **O**IO-Link

2-Color Display Digital Flow Switch



# PF2M7-L Series





#### Rated flow range

01	0.01 to 1 L/min
02	0.02 to 2 L/min
05	0.05 to 5 L/min
10	0.1 to 10 L/min
25	0.3 to 25 L/min
50	0.5 to 50 L/min
11	1 to 100 L/min

### 2 Flow adjustment valve

Nil	None
S	Yes

<sup>\*</sup> The flow adjustment valve is not available for the 1, 2, and 5 L type products.

#### 3 Port size

Cymbol	Port size	Rated flow range					je	
Symbol	Port Size	01	02	05	10	25	50	11
01	Rc1/8	•	•	•	•	•	•	_
N1	NPT1/8		•		•	•	•	_
F1	G1/8	•	•	•	•	•	•	_
02	Rc1/4	<del></del>	_	<b>—</b>	_	_	_	•
N2	NPT1/4	_	_	_	_	_	_	•
F2	G1/4	<del></del>	_	<u> </u>	_	_	_	•
C4*1	ø4	•	•	•	•	_	_	_
C6	ø6					•		_
C8	ø8	_	_	_	_	_	_	•

\*1 Made to order (Produced upon receipt of order)

Bracket (For the type with a flow

adjustment valve)

#### is not available for the 1

4 Output specification

Symbol	OUT1	OUT2		
L	IO-Link/NPN/PNP	_		
L2	IO-Link/NPN/PNP	NPN/PNP/External input		
L3	IO-Link/NPN/PNP	Analog 1 to 5 V ⇔ Analog 0 to 10 V*3		
L4	IO-Link/NPN/PNP	Analog 4 to 20 mA		

\*3 1 to 5 V or 0 to 10 V can be selected by pressing the button. The default setting is 1 to 5 V.

Bracket (For the type without

a flow adjustment valve)

#### Option 2

	Without bracket	* Interchangeable with the existing PFM series	ZS-33-MS With 3 tapping screws  * Interchangeable with the existing PFM series		
Ì		Ť	V		
		ount adapter (For the type a flow adjustment valve)	Panel mount adapter (For the type with a flow adjustment valve)		
	adap	Panel mount adapter mount oter B Panel pounting bracket	ZS-33-2JS Panel mount adapter S Panel mount adapter B Panel Mounting bracket		


\* Options are shipped together with the product but do not come assembled.

#### **Piping variations**

riping variations	
With One-touch fitting	Female thread
C4*2, C6, C8	01, 02, N1, N2, F1, F2
0 0 0	0 2

\*2 Made to order (Produced upon receipt of order)

#### **5** Option 1

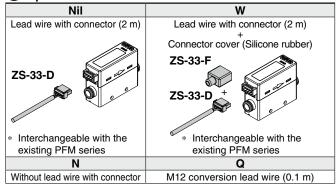

#### 6 Unit specification

Unit specification					
M	SI unit only*4				
Nil	Unit selection function*5				

- \*4 Fixed unit: Instantaneous flow: L/min Accumulated flow: L
- \*5 This product is for overseas use only.

  (The SI unit type is provided for use in Japan in accordance with the New Measurement Act.)

  The unit can be changed.

  Instantaneous flow: L/min ⇔ cfm

Accumulated flow: L ⇔ ft3

#### Made to Order

\*6 Made to order

Nil

made t	made to order						
Symbol	Specification						
	Compatible with argon (Ar) and carbon dioxide (CO <sub>2</sub> ) mixed gas						

The certificate is in both

English and Japanese.


Calibration certificate\*6

None

For details, refer to page 23.

#### **DIN Rail Mounting Bracket (To Be Ordered Separately)**

Refer to page 9.

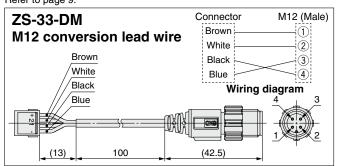

### **Specifications**

For flow switch precautions and specific product precautions, refer to the Operation Manual on the SMC website.

			Model	PF2M701(-L)	PF2M702(-L)	PF2M705(-L)	PF2M710(-L)	PF2M725(-L)	PF2M750(-L)	PF2M711(-L)
Fluid	Applicat	ble flui	d*1		Dry air, N2, A	r, CO <sub>2</sub> (JIS B 83	92-1 1.1.2 to 1.6	i.2, ISO 8573-1	1.1.2 to 1.6.2)	
<u>E</u>	Fluid temperature range						0 to 50°C			
	Detectio	n metl	nod				Thermal type			
	Rated flo	ow ran	ge Dry air, N <sub>2</sub> , Ar	0.01 to 1	0.02 to 2	0.05 to 5	0.1 to 10	0.3 to 25	0.5 to 50	1 to 100
	[L/min]		CO <sub>2</sub>	0.01 to 0.5	0.02 to 1	0.05 to 2.5	0.1 to 5	0.3 to 12.5	0.5 to 25	1 to 50
_		_	Instantaneous flow [L/i	nin] -0.05 to 1.05	-0.1 to 2.1	-0.25 to 5.25	-0.5 to 10.5	-1.3 to 26.3	-2.5 to 52.5	-5 to 105
Flow	Set poin	it range	Accumulated flow	[L] 0.00 to 9	999999.99	0.0 to 99	999999.9		0 to 999999999	
ш	Smallest settable Instantaneous flow [L/min]					0.01			0.1	
	increme		Accumulated flow		01	0	.1		1	
	Accumulated volume per pulse [L/pulse]				0.01			0.1		1
			value hold function*2		0.0.	Intervals of 2	or 5 minutes car			
			ssure range				-0.1 to 0.75 MPa			
ē			e range*3		=0.7 to 0.75 MPa					
ng	Proof pr				-0.07 to 0.75 MPa 1.0 MPa					
Pressure	Pressure		•			Dofor to	the "Pressure Lo	oo" groph		
۵			acteristics							
							1 digit (0.35 MPa			
ca	voltage*		For the switch output de				2 to 24 VDC ±10			
Ϊ			For the IO-Link device			1	8 to 30 VDC ±10	%		
Electrical	Current		mption				35 mA or less			
	Protection						Polarity protectio			
<b>^</b> *5	Display		_•				±3% F.S. ±1 digi	t		
Accuracy*5			accuracy				±3% F.S.			
ာ္လ	Repeata						±1 digit when the			
ĕ	•		haracteristics	±3%	F.S. ±1 digit (15				50°C: 25°C stand	dard)
	Output t	type				NPI	N/PNP open colle	ector		
	Output r	mode		Sele	ct from Hysteresi				umulated pulse o	utput,
	Output	illoue				Error output,	or Switch output	OFF modes.		
	Switch o	perati	on			Select from	Normal or Reve	rsed output.		
Ħ	Max. loa	d curr	ent				80 mA			
Max. load current										
o d	voltage	•	IO-Link compatible	)		3	0 VDC (NPN onl	y)		
itc	Internal	voltag	e Standard		NPN: 1 V or less (Load current: 80 mA) PNP: 1.5 V or less (Load current: 80 mA)					
Ś	drop		IO-Link compatible	)		1.5 V or	ess (Load currer	nt: 80 mA)		
	Response time*6						50 ms or less			
	Delay time*7			Select from 0 to 0	.10 s (increment of 0	0.01 s), 0.1 to 1.0 s	(increment of 0.1 s),	1 to 10 s (incremer	nt of 1 s), 20 s, 30 s,	40 s, 50 s, or 60 s.
	Hysteres	sis*8					Variable from 0			
	Protection	on				Sh	ort circuit protec	tion		
6*	Output t	type			Voltage output:	1 to 5 V (0 to 10	V can be selecte	d)*10, Current or	utput: 4 to 20 mA	
put			Voltage output			Output	impedance: Appr	ox. 1 kΩ		
Analog output*9	Impedar	ice	Current output	Maximum	load impedance:	600 $\Omega$ at power	supply voltage of	24 V, 300 Ω at p	ower supply volt	age of 12 V
_	Respons	se time	*6				50 ms ±40%			
	Referen	ce con	dition*11		Select f	rom Standard co	ndition (STD) or	Normal condition	n (NOR).	
	Display	mode			S	Select from Insta	ntaneous flow or	Accumulated flo	W.	
	Unit*12		Instantaneous flov	ı			L/min, cfm			
æ	Unit 12		Accumulated flow				L, ft <sup>3</sup>			
Display			Instantaneous flow [L/i	nin] -0.05 to 1.05	-0.1 to 2.1	-0.25 to 5.25	-0.5 to 10.5	-1.3 to 26.3	-2.5 to 52.5	-5 to 105
ă	Display	range	Zero cut-off range		0 to ±10%	% F.S. (Select pe	r 1% F.S. for the	maximum rated	flow rate.)	
	'	-	Accumulated flow [L	* <sup>13</sup> 0.00 to 9	999999.99	· · · · · ·	999999.9		0 to 99999999	,
	Display						led/Green, 4 digit	ts, 7 segments		
	Indicato				LI		itch output is ON		je)	
Digita	al filter*14						05 s, 0.1 s, 0.5 s,	· · · · · · · · · · · · · · · · · · ·		
	Enclosu						IP40	, -,		
Environmental resistance	Withstar		age		10	000 VAC for 1 min	nute between ter	minals and hous	ing	
vironment esistance	Insulation			50						ing
iro			perature range		50 MΩ or more (500 VDC measured via megohmmeter) between terminals and housing  Operating: 0 to 50°C, Stored: –10 to 60°C (No condensation or freezing)					
ב ב	_		nidity range		Operating/Stored: 35 to 85% RH (No condensation or freezing)					
Stand	<u> </u>	J	-, ·- <del>3-</del>		- Optilu	<del>-</del>	EMC Directive, R		<b>3</b> /	
	Piping		One-touch fitting		C4 (ø4)	/C6 (ø6)		1	(ø6)	C8 (ø8)
"B	specifica	ation	Screw-in (Rc, NPT, G)		2 : (3 :)		l1/F1		y -1	02/N2/F2
Piping* <sup>15</sup>	Piping e						Straight			
			rts in contact with fluid		PPS, PBT, FKM,	Stainless steel 3		oless nickel plat	ing), Si, Au. GE4	F
		_ <u> </u>	ouch fitting		-,,		) g		3,, -,, -3, 521	48 g
	Body	Screv					) g			72 g
<b>=</b>	Flow adj				_		Ī	+.3	34 g	
Weight	Lead wir						+35 g	10	. J	
Μe	Bracket						+20 g			
	Panel m		dapter				+15 g			
			ing bracket				+65 g			
			<u> </u>				3		-	

### 2-Color Display Digital Flow Switch **PF2M7(-L)** Series

- \*1 Refer to the "Recommended pneumatic circuit examples" on page 2.
- \*2 When using the accumulated value hold function, use the operating conditions to calculate the product life, and do not exceed it. The maximum access limit of the memory device is 3.7 million times. If the product is operated 24 hours per day, the product life will be as follows:
  - 5 min interval: life is calculated as 5 min x 3.7 million = 18.5 million min = 35 years
  - 2 min interval: life is calculated as 2 min x 3.7 million = 7.4 million min = 14 years
- \*3 Negative pressure indicates the pressure value on the IN side (inlet side).
- \*4 When multiple products are installed closely, the upper limit of the power supply voltage is 24 VDC.
- \*5 The accuracy value is based on dry air as a fluid. For other fluids, it is a reference value.
- \*6 Value when the digital filter is set at 0.05 s
- \*7 The time from when the instantaneous flow reaches the set value to when the switch output operates can be set.
- \*8 If the flow fluctuates around the set value, the hysteresis must be set to a value more than the fluctuating width. Otherwise, chattering will occur.
- \*9 When using a product with an analog output

- \*10 When selecting 0 to 10 V, refer to the analog output graph for the allowable load current.
- \*11 Standard condition (STD): 20 [°C], 101.3 [kPa] (Absolute pressure), 65 [% RH] (The flow rate given in the specifications is the value under standard conditions.)
  - Normal condition (NOR): 0 [°C], 101.3 [kPa] (Absolute pressure), 0 [% RH]
- \*12 Setting is only possible for models with the unit selection function.
- \*13 Power value is displayed for accumulated flow. The first 4 digits of the measurement value are always displayed.
- \*14 The time for the digital filter can be set to the sensor input. The response time indicates when the set value is 90% in relation to the step input.
- \*15 Check the precautions for One-touch fitting before use. When the piping condition is changed, for example due to piping on the back of the product, use a general purpose fitting (KQ□L series). Some piping conditions may have negative effects on the flow accuracy.
- \* Products with tiny scratches, marks, or display color or brightness variations which do not affect the performance of the product are verified as conforming products.

#### **Communication Specifications (IO-Link mode)**

IO-Link type	noutions (10 Link mode)	Device				
IO-Link version	V1.1					
Communication speed	COM	COM2 (38.4 kbps)				
Minimum cycle time		3.4 ms				
Process data length	Input data: 4 by	rtes, Output data: 0 byte				
On request data communication		Yes				
Data storage function		Yes				
Event function		Yes				
Vendor ID	13	1 (0 x 0083)				
Vendor ID       131 (0 x 0)         PF2M701-□-L□-□□□ : 0 x 00016D (365)       PF2M701-□-L2□-□□□: 0 x 00016E (366)         PF2M701-□-L3□-□□: 0 x 00016F (367)       PF2M701-□-L4□-□□: 0 x 000170 (368)         PF2M702-□-L□□□: 0 x 000171 (369)         PF2M702-□-L2□-□□□: 0 x 000172 (370)         PF2M702-□-L3□-□□: 0 x 000173 (371)         PF2M702-□-L4□-□□: 0 x 000174 (372)         Device ID         PF2M705-□-L4□-□□: 0 x 000175 (373)         PF2M705-□-L2□-□□: 0 x 000176 (374)         PF2M705-□-L4□-□□: 0 x 000177 (375)         PF2M705-□-L4□-□□: 0 x 000178 (376)         PF2M710-□-L□-□□: 0 x 000178 (377)         PF2M710-□-L2□-□□: 0 x 00017A (378)         PF2M710-□-L3□-□: 0 x 00017B (379)         PF2M710-□-L4□-□: 0 x 00017C (380)		PF2M725- -L				




#### Set Point Range and Rated Flow Range

#### Set the flow rate within the rated flow range.

The set point range is the range of flow rate that can be set in the switch.


The rated flow range is the range that satisfies the switch specifications (accuracy, linearity, etc.).


It is possible to set a value outside of the rated flow range if it is within the set point range, however, the satisfaction of specifications can not be guaranteed. The flow range if using CO<sub>2</sub> is given in brackets.

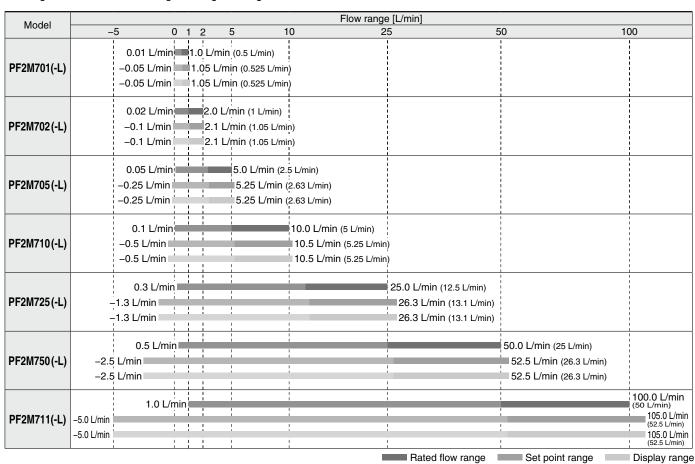

#### Flow/Analog Output

		E		
	Α	PF2M701/02/05 /10/50/11(-L)	PF2M725(-L)	С
Voltage output (1 to 5 V)	1 V	1.04 V	1.05 V	5 V
Current output (4 to 20 mA)	4 mA	4.16 mA	4.19 mA	20 mA
		F		
	E	PF2M701/02/05 /10/50/11(-L)	PF2M725(-L)	G
Voltage output (0 to 10 V)*1	0 V	0.10 V	0.12 V	10 V

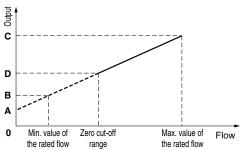

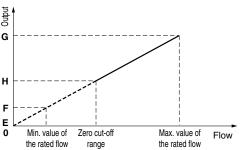



- \*1 The analog output current from the connected equipment should be 20  $\mu$ A or less when selecting 0 to 10 V. When 20  $\mu$ A or more current flows, it is possible that the accuracy is not satisfied at less than or equal to 0.5 V.
- \* D or H fluctuates depending on the setting of the zero cut-off function.


  When the zero cut-off function is set to "0," the flow rate display value starts from 0 L/min., but in conditions other than horizontal installation and supply pressure of 0.35 MPa, the output may not be 0 L/min.


### 2-Color Display Digital Flow Switch **PF2M7(-L)** Series


#### Pressure Loss (Reference Data): Without Flow Adjustment Valve

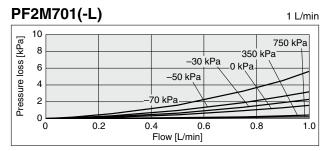


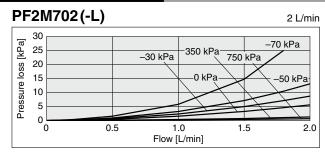


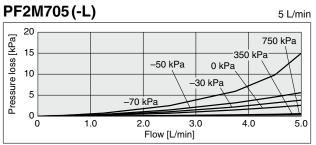

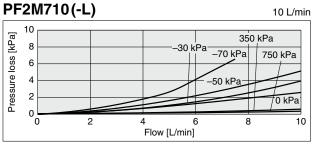


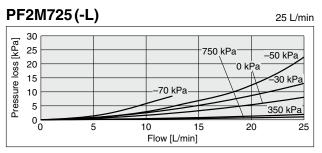


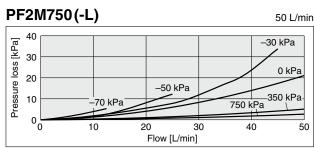


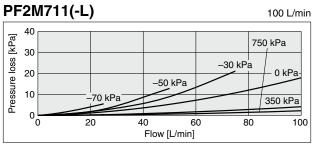


#### Flow Rate Characteristics (Reference Data)

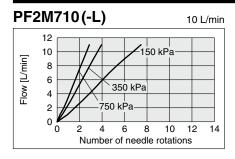

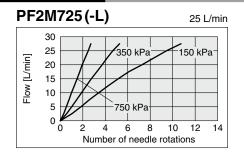

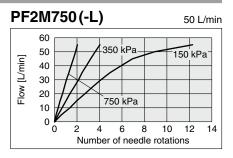

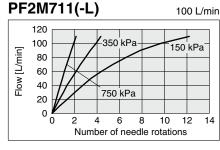






#### Flow Rate Characteristics at Negative Pressure (Reference Data)


When the PF2M series is used with negative pressure (-70 to 0 kPa), the measurable range (warranty range of the specifications including pressure characteristics) varies depending on the flow range.


Select the flow range referring to the graph below.

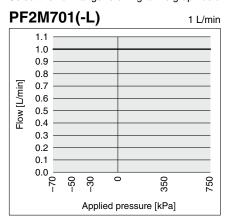


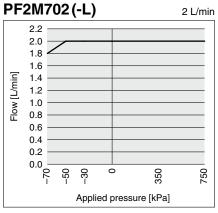


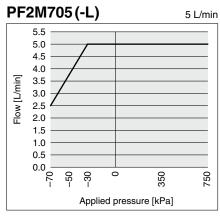

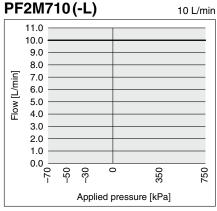

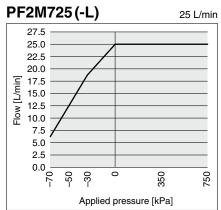

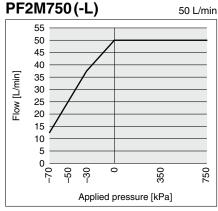

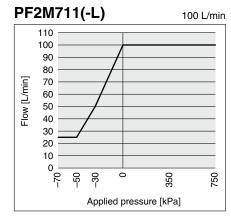

### 2-Color Display Digital Flow Switch **PF2M7(-L)** Series


#### Internal Circuits and Wiring Examples

#### NPN + NPN output type **PF2M7** ----**A**---

Brown DC (+) Black OUT1 - Pag 12 to 24 VDC White OUT2 Blue DC (-)


Max. applied voltage: 28 V, Max. load current: 80 mA, Internal voltage drop: 1 V or less

#### PNP + PNP output type **PF2M7** -------



Max. load current: 80 mA, Internal voltage drop: 1.5 V or less

#### NPN + Analog output type



Max. applied voltage: 28 V, Max. load current: 80 mA,


Internal voltage drop: 1 V or less

C: Analog output: 1 to 5 V or 0 to 10 V can be selected. Output impedance: 1 k $\Omega$ 

D: Analog output: 4 to 20 mA Load impedance: 50 to 600  $\Omega$ 

#### PNP + Analog output type

PF2M7




Max. load current: 80 mA, Internal voltage drop: 1.5 V or less

E: Analog output: 1 to 5 V or 0 to 10 V can be selected.

Output impedance: 1 k $\Omega$ F: Analog output: 4 to 20 mA Load impedance: 50 to 600  $\Omega$ 

Load


#### Accumulated pulse output wiring examples




PF2M7

NPN + Analog output type **PF2M7** \_\_-\_-**C**\_-\_\_\_

**PF2M7**--------




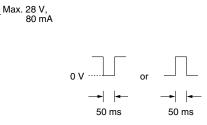

PNP + PNP output type PF2M7

PNP + Analog output type **PF2M7** ----**E**----**PF2M7**------








#### **Internal Circuits and Wiring Examples**


### PF2M7□□-□-L□-□□□ NPN output type



Max. applied voltage: 30 V, Max. load current: 80 mA, Internal voltage drop: 1.5 V or less


Blue DC (-)

#### PF2M7□□-□-L2□-□□□ NPN 2 output type



Max. applied voltage: 30 V, Max. load current: 80 mA, Internal voltage drop: 1.5 V or less


#### NPN + External input type



Max. applied voltage: 30 V, Max. load current: 80 mA, Internal voltage drop: 1.5 V or less

#### **PF2M7** ---------

L3: NPN + Analog voltage output type L4: NPN + Analog current output type




Max. applied voltage: 30 V, Max. load current: 80 mA,

Internal voltage drop: 1.5 V or less


L3: Analog output: 1 to 5 V or 0 to 10 V can be selected.

Output impedance: 1 k $\Omega$  L4: Analog output: 4 to 20 mA Load impedance: 50 to 600  $\Omega$ 

#### When used as an IO-Link device




#### PNP output type




Max. load current: 80 mA, Internal voltage drop: 1.5 V or less

#### PNP 2 output type




Max. load current: 80 mA, Internal voltage drop: 1.5 V or less

#### PNP + External input type



Max. load current: 80 mA, Internal voltage drop: 1.5 V or less

#### L3: PNP + Analog voltage output type L4: PNP + Analog current output type




Max. load current: 80 mA, Internal voltage drop: 1.5 V or less


L3: Analog output: 1 to 5 V or 0 to 10 V can be selected. Output impedance: 1  $k\Omega$ 


L4: Analog output: 4 to 20 mA Load impedance: 50 to 600 Ω


### **Construction: Parts in Contact with Fluid**

#### PF2M701/702/705/710/725/750/711(-L)

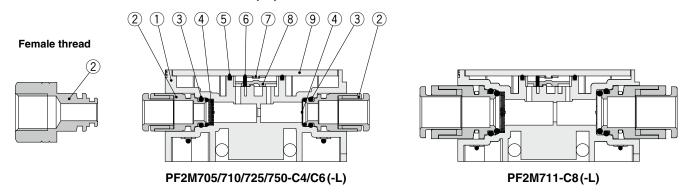

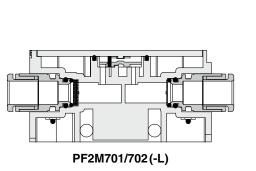



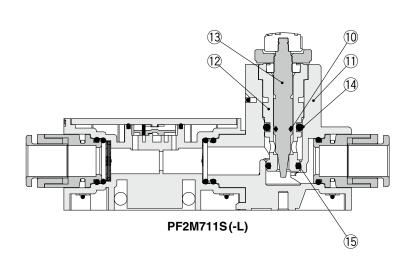


#### **Component Parts**


No.	Description	Material	Note
1	Body	PPS	
2	Fitting for piping	Brass	Electroless nickel plating
3	O-ring	FKM	
4	Flow rectifier	Stainless steel 304	
5	Seal	FKM	
6	Flow rectifier	Stainless steel 304	
7	Sensor chip	Silicon	
8	Body B	PPS	
9	Printed circuit board	GE4F	
10	O-ring	FKM	Fluoro coating
11	Flow adjustment valve body	PBT	
12	Body	Brass	Electroless nickel plating
13	Needle	Brass	Electroless nickel plating
14	O-ring	FKM	Fluoro coating
15	O-ring	FKM	Fluoro coating

#### **Dimensions**


#### PF2M7□-C4/C6/C8(-L)

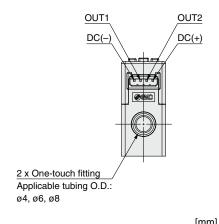


		[11111]
Model	Α	P
PF2M701/702/705/710 -C4(-L)	59.1	ø2.8 depth 8.4
PF2M701/702/705/710/ 725/750-C6(-L)	59.9	ø2.8 depth 8.4
PF2M711-C8(-L)	68	ø2.8 depth 6.2

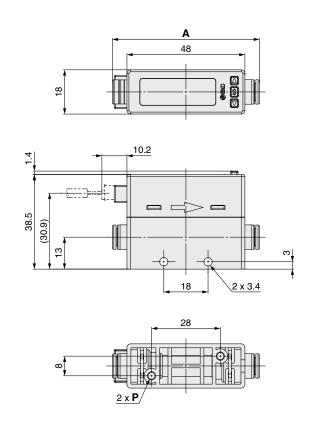

#### **PF2M7**□-□1/2(-**L**)

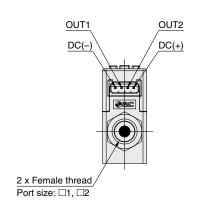

			[mm]
Model	Α	В	Р
PF2M701/702/705/710/ 725/750-01(-L)	66	14	ø2.8 depth 8.4
PF2M701/702/705/710/ 725/750-N1(-L)	68	14	ø2.8 depth 8.4
PF2M701/702/705/710/ 725/750-F1(-L)	70	14	ø2.8 depth 8.4
PF2M711-02(-L)	70	17	ø2.8 depth 6.2
PF2M711-N2(-L)	70	17	ø2.8 depth 6.2
PF2M711-F2(-L)	78	21	ø2.8 depth 6.2

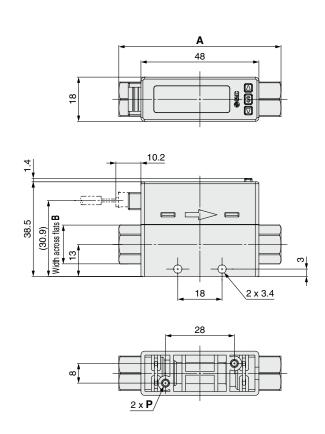






### 2-Color Display Digital Flow Switch **PF2M7(-L)** Series


#### **Dimensions**


#### PF2M7□S-C4/C6/C8(-L)

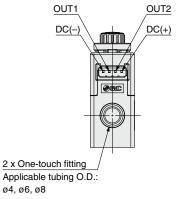

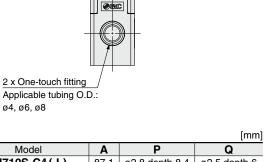

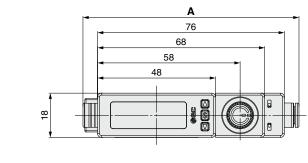


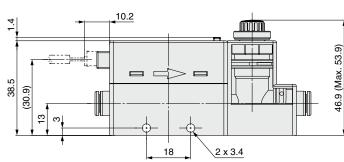





#### PF2M710S-C4(-L) 87.1 ø2.8 depth 8.4 ø2.5 depth 6 PF2M710/725/750S 87.9 ø2.8 depth 8.4 ø2.5 depth 6 -C6(-L) PF2M711S-C8(-L) 96 ø2.8 depth 6.2 ø2.5 depth 5




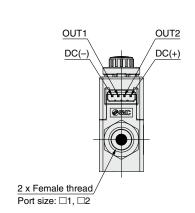

				[mm]
Model	Α	В	Р	Q
PF2M710/725/750S -01(-L)	94	14	ø2.8 depth 8.4	ø2.5 depth 6
PF2M710/725/750S -N1(-L)	96	14	ø2.8 depth 8.4	ø2.5 depth 6
PF2M710/725/750S -F1(-L)	98	14	ø2.8 depth 8.4	ø2.5 depth 6
PF2M711S-02(-L)	98	17	ø2.8 depth 6.2	ø2.5 depth 5
PF2M711S-N2(-L)	98	17	ø2.8 depth 6.2	ø2.5 depth 5
PF2M711S-F2(-L)	106	21	ø2.8 depth 6.2	ø2.5 depth 5

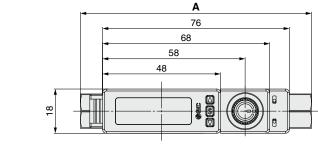

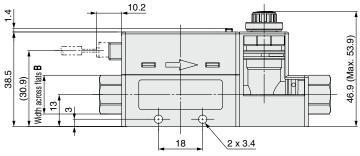







#### **Dimensions**

#### PF2M701/702/705/710/725/750/711(-L)

#### Panel mounting/Without flow adjustment valve/Straight

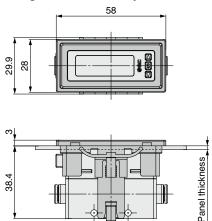


#### **Panel Fitting Dimensions**

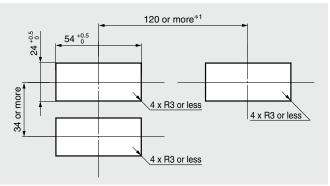


Panel thickness 1 to 3.2 mm

\*1 Port direction: As the piping inlet is straight type, please design the layout with consideration to the tubing and piping materials. If a bend (R) is used, limit it to R3 or less.


#### With bracket/Without flow adjustment valve

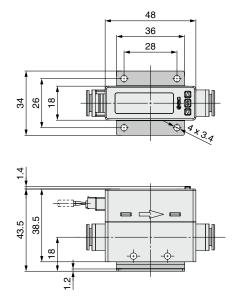

#### Panel mounting/With flow adjustment valve/Straight

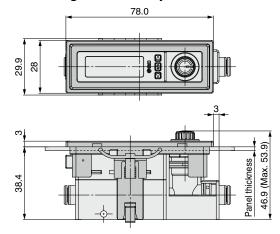


#### **Panel Fitting Dimensions**

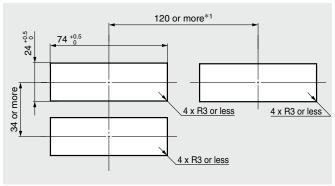

Panel thickness 1 to 3.2 mm

\*1 Port direction: As the piping inlet is straight type, please design the layout with consideration to the tubing and piping materials. If a bend (R) is used, limit it to R3 or less.

#### With bracket/With flow adjustment valve

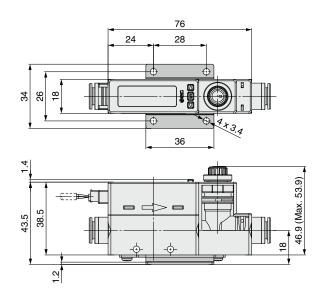



#### **Dimensions**

### PF2M701/702/705/710/725/750/711(-L)

### DIN rail mounting bracket


#### **ZS-33-R**□

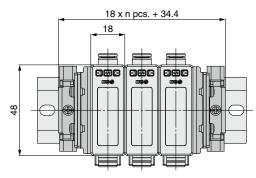



#### DIN rail AXT100-DR-□


 $\ast\;$  For  $\Box,$  enter a number from the No. line in the table below.

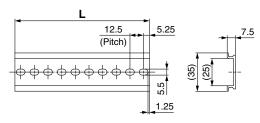

L Dimensions [mm]

=																					
	No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
	L	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5

### Lead wire with connector ZS-33-D

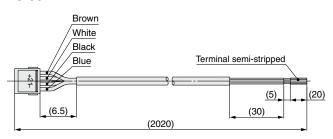

#### **Cable Specifications**

Conductor	Nominal cross section	AWG 26					
Conductor	Outside diameter	Approx. 0.50 mm					
Insulator	Outside diameter	Approx. 1.00 mm					
insulator	Color	Brown, White, Black, Blue					
Sheath	Material	Oil-resistant PVC					
Finished outside of	liameter	ø3.5					

\* For wiring, refer to the Operation Manual from the SMC website Documents/Download --> Instruction Manuals.



# **PF2M7-L** Series **IO-Link** Compatible Products

## **Made to Order**

Please contact SMC for detailed specifications, delivery times, and prices.



#### **Symbol**

#### Compatible with Argon (Ar) and Carbon Dioxide (CO2) Mixed Gas

X731

The argon–carbon dioxide gas ratio (Ar :  $CO_2$ ) can be selected using the push-buttons from among the following: 92:8, 90:10, 80:20, 70:30, 60:40, 40:60, and 30:70. The dimensions are the same as those of the standard model.

PF2M 7									
Output specification									
7 Integrated display	Symbol	OUT1	OUT2						
	L	IO-Link/NPN/PNP	_						
	L2	IO-Link/NPN/PNP	NPN/PNP/External input						
	L3	IO-Link/NPN/PNP	Analog 1 to 5 V $\Leftrightarrow$ Analog 0 to 10 V						
	L4	IO-Link/NPN/PNP	Analog 4 to 20 mA						

For "How to Order," refer to page 10.

<sup>\*</sup> Only applicable to the IO-Link output specification

Model	Gas ratio		Dated flavorens	Diamles (Cat maint range	Max. analog output		
Model	Ar	CO <sub>2</sub>	Rated flow range	Display/Set point range	Voltage (Vmax)	Current (Imax)	
	92%	8%					
	90%	10%					
	80%	20%	0.01 to 1 L/min	-0.05 to 1.05 L/min	5 V	20 mA	
PF2M701	70%	30%					
	60%	40%					
	40%	60%	0.01 to 0.6 L/min	-0.03 to 0.63 L/min	5 V	20 mA	
	30%	70%	0.01 10 0.6 L/111111	-0.03 to 0.63 L/IIIII	o v	20 IIIA	
	92%	8%					
	90%	10%	_				
	80%	20%	0.02 to 2 L/min	-0.1 to 2.1 L/min	5 V	20 mA	
PF2M702	70%	30%	0.02 to 2 L/min				
	60%	40%					
	40%	60%					
	30%	70%	0.02 to 1.2 L/min	-0.06 to 1.26 L/min	5 V	20 mA	
	92%	8%					
	90%	10%		-0.25 to 5.25 L/min		20 mA	
	80%	20%	0.05 to 5 L/min		5 V		
PF2M705	70%	30%					
	60%	40%					
	40%	60%					
	30%	70%	0.05 to 3 L/min	-0.15 to 3.15 L/min	5 V	20 mA	
	92%	8%	0.1 to 10 L/min				
	90%	10%					
	80%	20%		-0.5 to 10.5 L/min	5 V	20 mA	
PF2M710	70%	30%					
	60%	40%	-				
	40%	60%					
	30%	70%	0.1 to 6 L/min	-0.3 to 6.3 L/min	5 V	20 mA	
	92%	8%					
	90%	10%	0.3 to 25 L/min			ı	
	80%	20%		-1.3 to 26.3 L/min	5 V	20 mA	
PF2M725	70%	30%				20 mA	
•	60%	40%	-				
	40%	60%					
	30%	70%	0.3 to 15 L/min	–0.8 to 15.8 L/min	5 V		
	92%	8%					
	90%	10%	1			20 mA	
	80%	20%	0.5 to 50 L/min	-2.5 to 52.5 L/min	5 V		
PF2M750	70%	30%			- ·		
	60%	40%	1				
	40%	60%					
	30%	70%	0.5 to 30 L/min	–1.5 to 31.5 L/min	5 V	20 mA	
	92%	8%					
	90%	10%	1				
	80%	20%	1 to 100 L/min	-5 to 105 L/min	5 V	20 mA	
PF2M711	70%	30%		0.00.00.00	<b>.</b>		
	60%	40%	1				
	40%	60%					
	30%	70%	1 to 60 L/min	-3 to 63 L/min	5 V	20 mA	

<sup>\*</sup> When changing the max. analog output, use the analog free span function on page 25.



# PF2M7(-L) Series Function Details

For setting of functions and operation method, refer to the Operation Manual from the SMC website Documents/Download --> Instruction Manuals.

#### ■ Output operation

The output operation can be selected from the following:

Output corresponding to instantaneous flow (Hysteresis mode, Window comparator mode)

- · Hysteresis mode is the mode where the switch output will turn ON when the flow is greater than the set value, and will turn OFF when the flow falls below the set value by the amount of hysteresis or more.
- · Window comparator mode is the mode where an operating mode in which the switch output is turned on and off depending on whether the flow is inside or outside the range of two set values.

Output corresponding to accumulated flow (Accumulated output mode, Accumulated pulse output mode)

- · In accumulated output mode, the switch output will start at the set accumulated flow rate value.
- · Accumulated pulse output is a pulse signal which is output every time a predefined accumulated flow has passed.

Others (Error output, Switch output OFF)

- The error output function outputs the switch output when an error is displayed.
- · The switch output off function turns off the switch output.
- \* Default setting: Hysteresis mode, Normal output

#### ■ Simple setting mode

Only the set values for instantaneous flow and accumulated flow can be changed. Output mode, output type, display color, and accumulate pulse output cannot be changed.

#### ■ Display color

The display color can be selected for each output condition. The selection of the display color provides visual identification of abnormal values.

Green for ON, Red for OFF			
Red for ON, Green for OFF			
Red all the time			
Green all the time			

#### ■ Reference condition

The display unit can be selected from standard condition or normal condition.

Standard condition: Flow rate converted to a volume at 20°C, 101.3 kPa (absolute pressure), and 65% RH Normal condition: Flow rate converted to a volume at 0°C, 101.3 kPa (absolute pressure), and 0% RH

#### ■ Delay time setting

The time from when the instantaneous flow reaches the set value to when the switch output operates can be set. Setting the delay time can prevent the switch output from chattering.

The total switching time is the switch operation time and the set delay time. (Default setting: 0 s)

0 to 0.10 s (increment of 0.01 s)					
0.1 to 1.0 s (increment of 0.1 s)					
1 to 10 s (increment of 1 s)					
20 s					
30 s					
40 s					
50 s					
60 s					

#### ■ Digital filter setting

The time for the digital filter can be set to the sensor input. Setting the digital filter can reduce chattering of the switch output and flickering of the analog output and the display.

E	0.1 s
Г	0.5 s
	1 s
Г	2 s
Г	5 s

0.05 s

The response time indicates when the set value is 90% in relation to the step input.

(Default setting: 1 s)

#### ■ Selectable analog output function

1 to 5 V or 0 to 10 V can be selected for the analog voltage output type. (Default setting: 1 to 5 V)

#### **■** Forced output function

The output is turned on/off in a fixed state when starting the system or during maintenance. This enables the confirmation of wiring and prevents system errors due to unexpected output.

For the analog output type: When ON, the output will be 5 V (or 10 V when 0 to 10 V is selected) or 20 mA, and when OFF, 1 V (or 0 V when 0 to 10 V is selected) or 4 mA.

\* Also, an increase or decrease of the flow will not change the on/off status of the output while the forced output function is activated.

#### ■ Accumulated value hold

The accumulated value will be stored even if the power supply is turned off. The accumulated value is memorized every 2 or 5 minutes during measurement and continues from the last memorized value when the power supply is turned on again.

The maximum writable limit of the memory device is 3.7 million times, which should be taken into consideration.

#### ■ Peak/Bottom value display

The maximum (minimum) flow rate is detected and updated from when the power supply is turned on. In peak (bottom) value display mode, this maximum (minimum) flow rate is displayed.

#### **■** Display OFF mode

This function will turn the display OFF. In this mode, "\_ \_ " will flash on the main screen. If any button is pressed during this mode, the display reverts to normal for 30 seconds to allow checking of the flow, etc.

#### ■ Setting of security code

The user can select whether a security code must be entered to release the key lock. At the time of factory shipment, it is set so that a security code is not required.

#### ■ Key-lock function


Prevents operation errors such as accidentally changing setting values

#### ■ Reset to the default settings

The product can be returned to its factory default settings.

#### ■ Reversible display mode

When the switch is used upside down, the orientation of the display can be rotated to make it easier to read by using the reversible display function.

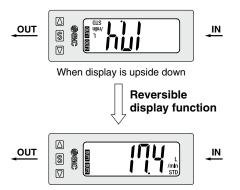

#### ■ Zero cut-off function

When the flow is close to 0 L/min, the product will round the value down and zero will be displayed. A flow value may be displayed even when the flow rate is 0 L/min due to high pressure or depending on the installation. The zero cut-off function will force the display to zero.


#### ■ Zero-clear function


The measured flow rate indication can be adjusted to zero. The adjustment range is  $\pm 5\%$  F.S. of the initial factory setting.



#### ■ Analog free span function

This function allows a flow that generates an output of 5 V (or 10 V when 0 to 10 V is selected) or 20 mA to be changed. The value can be changed between 10% of the maximum value of the rated flow and the maximum value of the display range.

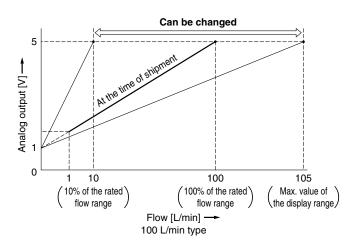

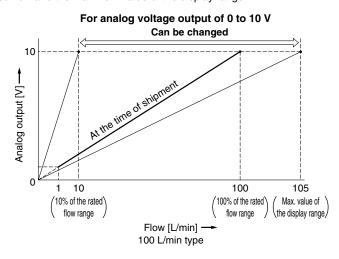

#### **■** Error display function


When an error or abnormality arises, the location and contents are displayed.


Display	Error name	Description	Action
Er 1	OUT1 over current error	The switch output (OUT1) load current of 80 mA or more flows.	Turn the power OFF and remove the cause of the
Er 2	OUT2 over current error	The switch output (OUT2) load current of 80 mA or more flows.	over current. Then turn the power ON again.
XXX	Instantaneous flow error	The flow has exceeded the upper limit of the flow display range.	Decrease the flow rate.
LLL	mstantaneous now error	The flow has exceeded the lower limit of the flow display range.	Change the flow to the correct direction.
2999 *** = Accumulated flow is displayed. (Flashing)	Accumulated flow error*1	The accumulated flow has exceeded the accumulated flow range. (For accumulated increment) (The decimal point position varies depending on the flow range or measurement unit setting.)	Reset the accumulated flow.
Accumulated flow is displayed. (Flashing)	Accumulated flow error	The accumulated flow has reached the set accumulated flow value. (For accumulated decrement) (The decimal point position varies depending on the flow range or measurement unit setting.)	(Press the SET and DOWN buttons simultaneously for 1 second or longer.)
Er 3	Outside of zero-clear range	During zero-clear operation, the flow rate of $\pm 5\%$ F.S. or more is applied. (The mode is returned to measurement mode after 1 second.)	Retry the zero-clear operation without applying fluid.
Er 0 Er 4 Er 6 Er 7 Er 8 Er 14 Er 16 Er 40	System error	An internal data error has occurred.	Turn the power OFF and turn it ON again.
Er 15	Version does not match*2	The IO-Link version does not match that of the master. The master uses version 1.0.	Ensure that the master IO-Link version matches the device version.

- \*1 A decimal point will be displayed depending on the flow range or measurement unit setting.
- \*2 Only for the IO-Link compatible products
- \* If the error cannot be solved after the instructions above are performed, please contact SMC for investigation.

#### ■ Unit display function

The unit displayed on the screen differs depending on the unit setting in measurement mode.



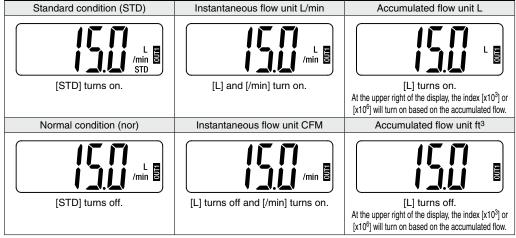



### **⚠** Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)\*1), and other safety regulations.

Caution: Caution indicates a hazard with a low level of risk which, If not avoided, could result in minor or moderate injury.

------

Warning: Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

⚠ Danger: Danger if not avoided, will result in death or serious injury. **Danger** indicates a hazard with a high level of risk which, \*1) ISO 4414: Pneumatic fluid power - General rules relating to systems.

ISO 4413: Hydraulic fluid power – General rules relating to systems.

IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

#### **⚠Warning**

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
  - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
  - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
  - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.
  - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
  - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
  - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
  - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

#### **⚠** Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.

#### Limited warranty and Disclaimer/ **Compliance Requirements**

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

#### **Limited warranty and Disclaimer**

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.\*2)
  - Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
  - 2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

#### Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

#### **⚠** Caution

#### SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

#### **Revision History**

- Edition B \* The PF2M701, 702, and 705 have been added.
  - \* A female thread type has been added.
  - \* The IO-Link compatible PF2M7-L series has been added.
  - \* Internal circuits and wiring examples have been revised.
  - \* A made-to-order option (Compatible with argon (Ar) and carbon dioxide (CO2) mixed gas) has been added.
  - \* Number of pages has been increased from 20 to 28.

YU

↑ Safety Instructions Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.