Series 10-V100 Rubber seal 3 port direct operated solenoid valve







Specifications

| Fluid | Air |
|--|---|
| riuiu | All |
| Ambient and fluid temperature (°C) | -10 to 50 (With no freezing. Refer to page 714.) |
| Response time (DC) ms Note 1) | ON: 5 or less, OFF: 4 or less |
| Max. operating frequency (Hz) | 20 |
| Manual override | Non-locking push type, push-turn locking slotted type |
| Lubrication | Not required |
| Mounting position | Unrestricted |
| Impact / vibration resistance (m/s²) Note 2) | 150/30 |
| Enclosure | Dust tight |



Note 1) Based on dynamic performance test, JIS B 8374-1981 (Standard type :Coil temperature 20°C, at rated voltage, without surge voltage suppressor)

Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Initial value)

Vibration resistance: No malfunction occurred in one sweep between 45 and 2000Hz. Test was performed in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states. (Initial value)

Solenoid specifications

| Series | | | 10-V114/V124 | 10-V114A/V124A | | | |
|--------------------------|-----------------|----------------|---|---------------------------------|--|--|--|
| Electrical entry | | | Grommet (G)/(H), L plug connector (L) M plug connector (M) | | | | |
| O-11 | DC | | 24, 12, | 6, 5, 3 | | | |
| Coil rated voltage V | AC ⁵ | 50/60Hz | 100, 110, 200, 220 | _ | | | |
| Allowable voltage fluctu | uation | | -10 to 10%* | | | | |
| Power consumption (W) | | DC | Standard: 0.35 (With indicator light: 0.4) With power saving circuit: 0.1 Note) [Starting 0.4, Holding 0.1] | 1 W (With indicator light: 1.1) | | | |
| | | 100V | 0.78 (With indicator light: 0.81) | _ | | | |
| Apparent power (VA) | | 110V [115V] | 0.86 (With indicator light: 0.89) 0.94 (With indicator light: 0.97) | _ _ | | | |
| | AC | 200V | 1.18 (With indicator light: 1.22) | _ | | | |
| | | 220V [230V] | 1.30 (With indicator light: 1.34) [1.42 (With indicator light: 1.46)] | _ _ | | | |
| Surge voltage suppress | sor | | Refer to page 647. | | | | |
| Indicator light | | | LED | | | | |



10-V124 (A)



- * In common between 110VAC and 115VAC, and between 220VAC and 230VAC.
- * For 115VAC and 230VAC, the allowable voltage fluctuation will be -15% to 5% of rated voltage.
- * The voltage drop will occur due to the internal circuit of S, Z and T types (with energy saving

Allowable voltage fluctuations should be within the range below.

S and Z types 24 VDC: -7% to +10%

12 VDC: -4% to +10%

T type 24 VDC: -8% to +10%

12 VDC: -6% to +10%

* Select the DC standard type or the power saving circuit type when the valve is continuously energized for long periods of time.

Note) Refer to page 647 for details.



Symbol

10-V114 (A)

Model

| Value medal | Type of | Tuno | Operating pressure | Vacuum speci | fication (MPa) | Port | size | Weight (g) Note 2) | | |
|------------------|-----------|---------------------|--------------------|----------------|----------------|------------|----------|--------------------|--------------------|--|
| Valve model | actuation | Type | range (MPa) | Port 1 | Port 3 | Ports 1, 3 | Port 2 | Grommet type | L/M plug connector | |
| 10-V114 | N.C. | Standard | 0 to 0.7 | -100kPa to 0.6 | -100kPa to 0 | M5 x 0.8 | M5 x 0.8 | | | |
| 10-V114A | N.C. | Large flow capacity | 0 to 0.7 | -100kPa to 0.6 | -100kPa to 0 | M5 x 0.8 | M5 x 0.8 | 10-V1□4: 13(27) | 10-V1□4: 12(26) | |
| 10-V124 Note 1) | N.O. | Standard | 0 to 0.7 | -100kPa to 0 | -100kPa to 0.6 | M5 x 0.8 | M5 x 0.8 | 10-V1□4A: 16(30) | 10-V1□4A: 15(29) | |
| 10-V124A Note 1) | N.O. | Large flow capacity | 0 to 0.7 | -100kPa to 0 | -100kPa to 0.6 | M5 x 0.8 | M5 x 0.8 | | | |


| | Flow characteristics | | | | | | | | | | | |
|------------------|----------------------|-------------------|-------|-------------------|------|-------|--|--|--|--|--|--|
| Valve model | | 1→2 [3→2 Note 3)] | | 2→3 [2→1 Note 3)] | | | | | | | | |
| | C[dm³/(s·bar)] | b | Cv | C[dm3/(s·bar)] | b | Cv | | | | | | |
| 10-V114 | 0.037 | 0.11 | 0.008 | 0.054 | 0.35 | 0.015 | | | | | | |
| 10-V114A | 0.076 | 0.07 | 0.016 | 0.099 | 0.23 | 0.024 | | | | | | |
| 10-V124 Note 1) | 0.054 0.35 | | 0.015 | 0.037 | 0.11 | 0.008 | | | | | | |
| 10-V124A Note 1) | 0.099 | 0.23 | 0.024 | 0.076 | 0.07 | 0.016 | | | | | | |

Note 1) 10-V124 and 10-V124A: Supply pressure to port 3 and exhaust from port 1. Note 2) (): With sub-plate Note 3) For 10-V124(A)







Standard type

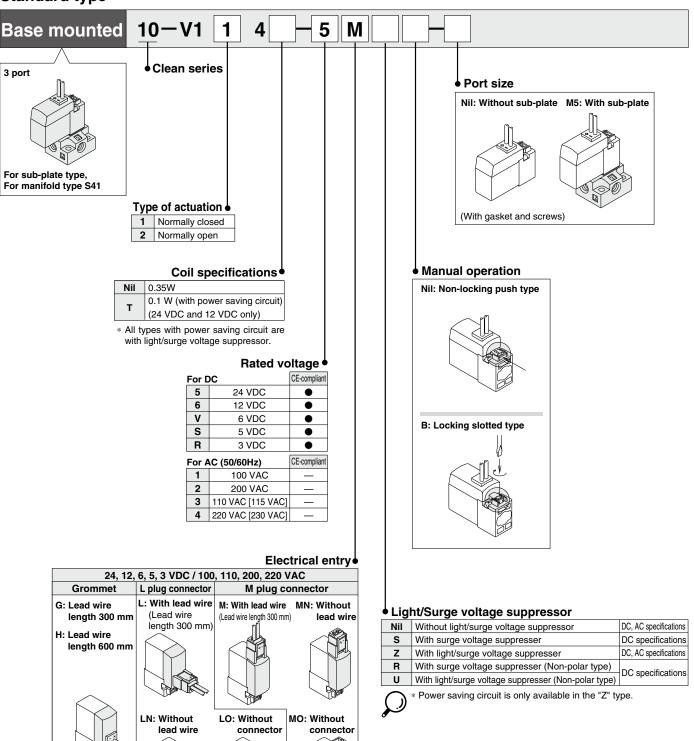

* "LN", "MN" type: with 2 sockets.


How to Order Large flow type

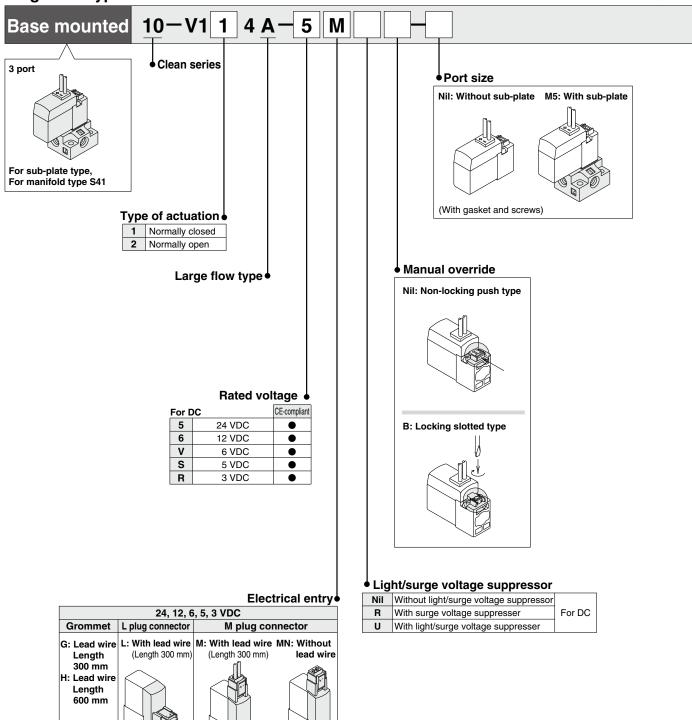

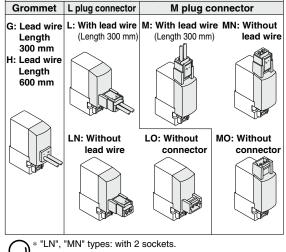


Base mounted (with sub-plate)

Grommet (G)/(H): $10\text{-V1}_2^14(A)$ - $\Box_H^G\Box\Box$ -M5

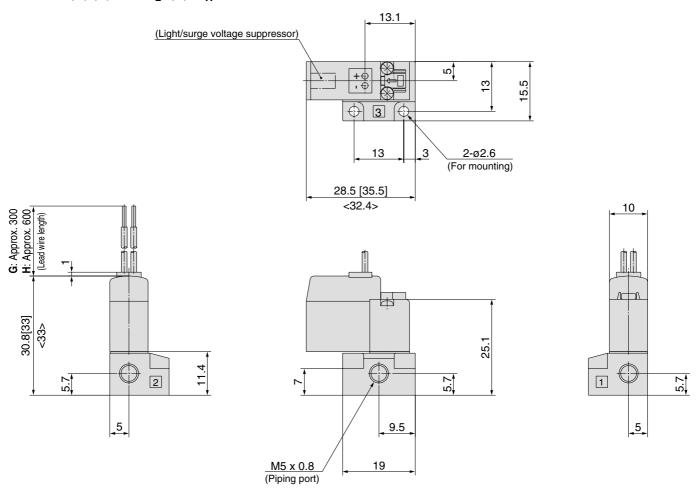


L plug connector (L): 10-V1¹₂4(A)-□L□□-M5

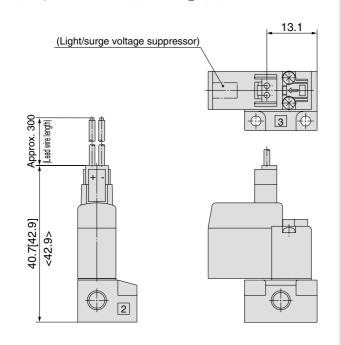


* Other dimensions are same as grommet style.

M plug connector (M): 10-V1¹₂4(A)-□M□□-M5

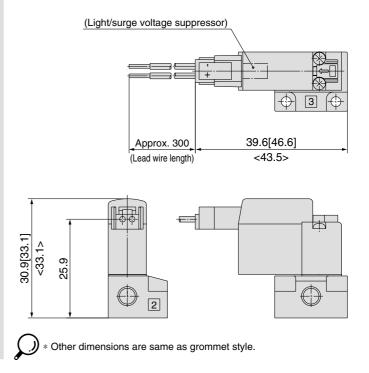

Series 10-V100 3 port solenoid valve Manifold specifications

Manifold specifications

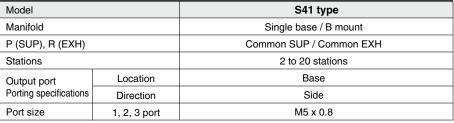



Note 1) 10-V114(A) and 10-V124(A) cannot be mounted on the same manifold. Note 2) For 10-V124(A), supply pressure to port 3 and exhaust from port 1.


Flow characteristics Note 1)

| 1 | Manifold | | Port size | Flow characteristics | | | | | | | | | |
|---|-------------------|----------|--------------|----------------------|---|-------|-------------------|------|-------|--|--|--|--|
| | | | 1 0 0 nort | | $1 \rightarrow 2 [3 \rightarrow 2 Note 2)]$ | | 2-3 [2-1 Note 2)] | | | | | | |
| | | | 1, 2, 3 port | C[dm3/(s-bar)] | b | Cv | C[dm3/(s·bar)] | р | Cv | | | | |
| | 10-VV100-S41 type | 10-V114 | | 0.032 | 0.13 | 0.007 | 0.050 | 0.26 | 0.012 | | | | |
| | | 10-V114A | M5 x 0.8 | 0.070 | 0.10 | 0.016 | 0.085 | 0.16 | 0.020 | | | | |
| | | 10-V124 | | 0.050 | 0.26 | 0.012 | 0.032 | 0.13 | 0.007 | | | | |
| | | 10-V124A | | 0.085 | 0.16 | 0.020 | 0.070 | 0.10 | 0.016 | | | | |

Note 1) Values when manifold base (5 stations) is mounted. Note 2) For 10-V124(A)

How to Order Valve Manifold Assembly

Ordering example

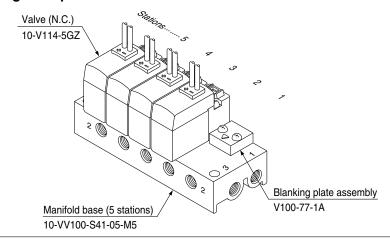

10-VV100-S41-05-M5......1 set (S41 type 5 station manifold part no.)


* V100-77-1A1 set (blanking plate assembly part no.) * 10-V114-5GZ.....4 sets (valve)

►The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Indicate part numbers of valve and option beneath the manifold part no.




Common SUP / Common EXH

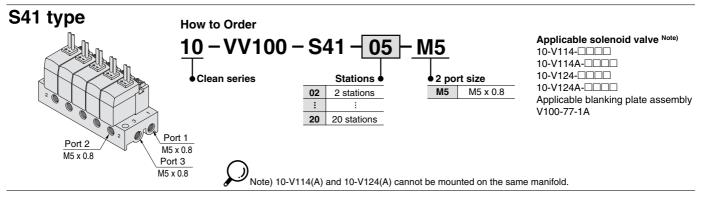

(Manifold option) Blanking plate assembly

Part no: V100-77-1A

Place notch mark on the blanking plate to 2 port side when assembling.

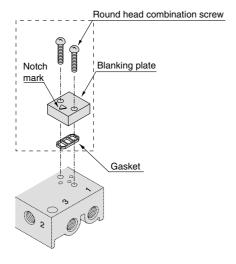


Base


- · Sub-plate
- · 10- VV100-S41 type manifold base

Type S41 manifold: Side ported / 10-VV100-S41- Stations -M5


Note) []: AC < >: For large flow type (A)

Grommet (G), (H)

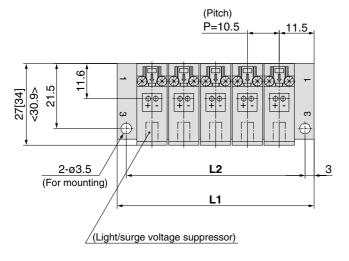


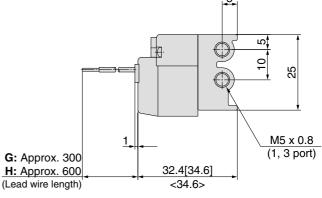


(Station n) ----- (Station 1)

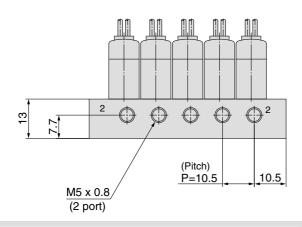

L plug connector (L)

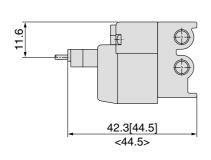

M plug connector (M)

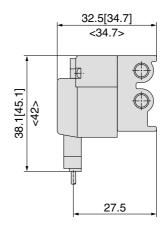

* Other dimensions are same as grommet style.

* Other dimensions are same as grommet style.

| Stations | 2 stations | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 stations |
|----------|------------|----|------|----|------|----|------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------------|
| L1 | 33.5 | 44 | 54.5 | 65 | 75.5 | 86 | 96.5 | 107 | 117.5 | 128 | 138.5 | 149 | 159.5 | 170 | 180.5 | 191 | 201.5 | 212 | 222.5 |
| L2 | 27.5 | 38 | 48.5 | 59 | 69.5 | 80 | 90.5 | 101 | 111.5 | 122 | 132.5 | 143 | 153.5 | 164 | 174.5 | 185 | 195.5 | 206 | 216.5 |



Series 10-V100 **Specific Product Precautions 1**

Be sure to read before handling.


⚠ Warning

Manual override operation

Since connected equipment will be actuated when the manual override is operated, first confirm that conditions are safe.

■ Non-locking push type [Standard] ■ Locking slotted type [B]

Press in the direction of the arrow.







When operating with a screwdriver, turn it gently using a watchmaker's screwdriver.


[Torque: Less than 0.1 N·m]

⚠ Caution

How to use plug connector

1. Attaching and detaching connectors


- To attach a connector, hold the lever and connector unit between your fingers and insert straight onto the pins of the solenoid valve so that the lever's pawl is pushed into the groove and locks.
- To detach a connector, remove the pawl from the groove by pushing the lever downward with your thumb, and pull the connector straight out.

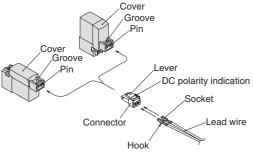

2. Crimping of lead wires and sockets

Strip 3.2 to 3.7 mm at the end of the lead wires, insert the ends of the core wires evenly into the sockets, and then crimp with a crimping tool. When this is done, take care that the coverings of the lead wires do not enter the core wire crimping area.

Use special tool when crimping. (For the crimping tool, please consult with SMC.)



How to use plug connector


3. Attaching and detaching sockets with lead wires

Attaching

Insert the sockets into the square holes of the connector (with(+)and(-) indication), and continue to push the sockets all the way in until they lock by hooking into the seats in the connector. (When they are pushed in, their hooks open and they are locked automatically.) Then confirm that they are locked by pulling lightly on the lead wires.

Detaching


To detach a socket from a connector, pull out the lead wire while pressing the socket's hook with a stick having a thin tip (approx. 1 mm). If the socket will be used again, first spread the hook outward.



Plug connector lead wire length

Standard length is 300 mm, however, the following lengths are also available.

How to Order Connector Assembly

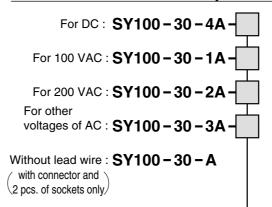

How to Order

Indicate part numbers of the valve without connector and the required connector assembly separately

<Example> Lead wire length 2000 mm

For DC For AC 10-V114-5LO 10-V114A-1LO SY100-30-4A-20 SY100-30-1A-20

Lead wire length Nil 300mm 600mm 10 1000mm 15 1500mm 20 2000mm 25 2500mm 30 3000mm 5000mm 50





Series 10-V100 Specific Product Precautions 2


Be sure to read before handling.

Surge voltage suppressor

(For DC)
Grommet, L/M plug connector




■ Standard type (with polarity)
With surge voltage suppresser (□S)











■ Non-polar type

With surge voltage suppresser (□R)




With light/surge voltage suppresser (□U)



- •Please connect correctly the lead wires to + (positive) and (negative) indications on the connector
- For DC voltages other than 12 and 24 VDC, use caution not to connect in reverse due to the absence of a diode to prevent reverse current. (Wrong polarity will cause trouble.)
- Solenoids, whose lead wires have been pre-wired: positive side red and negative side black

■ With power saving circuit


Power consumption is reduced by approximately 75% compared with the standard product by eliminating the need for electrical current for holding. (Effective after more than Black coltage applied.)



Working principle


The electrical circuit as shown above, allows reduced holding current consumption and measures power saving. Refer to electric waveform on the right

•When a power saving circuit is installed, a diode to prevent reverse current is not provided. Therefore, use caution not to connect in reverse.



<For AC>

Grommet, L / M plug connectors



⚠ Caution

In the case of ZNR surge voltage suppressor, take note the surge voltage to be suppressed at controller side as there will be a residual voltage according to the protective element and rated voltage.


Moreover, the residual voltage of the diode is approximately 1V.

Connector assembly with cover


Connector assembly with protective cover enhances dust protection

- Effective in preventing possible short circuit problems due to contaminants in contact with connector section
- Chloroprene rubber for electrical use, which provides outstanding weather resistance and electrical insulation, is used for the cover material. However, be careful not to allow contact with cutting oil, etc.
- Round cord provides neat appearance.

How to Order

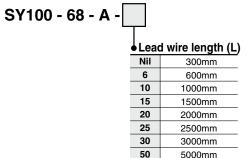

Connector assembly with cover / Dimensions

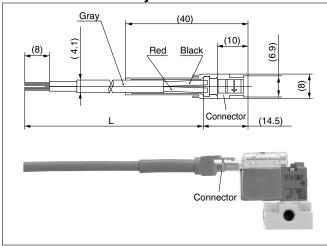

How to Order

Specify the part numbers of the solenoid valve without connector together with the part number of the connector assembly with protective cover.

<Example> Lead wire length 2000 mm

10-V114-5LOZ-M5

SY100-68-A-20

<Example 2 >Lead wire length 300 mm (Standard)

10-V114-5LPZ-M5

Symbol of connector assembly with protective cover

* No part numbers of connector assembly with cover are needed to be indicated in this case.